



**Stock Berms** (12" Walls, 7.5 gal/ft<sup>3</sup>)

Size (ft)	Capacity (~gals)	Brackets	Daily	Weekly (7 days)	Monthly (30 Days)
8 x 8	480 gal	10	\$Call	\$Call	\$Call
8 x 18	1080 gal	18	\$Call	\$Call	\$Call
12 x 12	1080 gal	16	\$Call	\$Call	\$Call
12 x 16	1440 gal	18	\$Call	\$Call	\$Call
12 x 20	1800 gal	22	\$Call	\$Call	\$Call
12 x 25	2250 gal	26	\$Call	\$Call	\$Call
12 x 50	4500 gal	43	\$Call	\$Call	\$Call
Ground Cover			\$Call	\$Call	\$Call
Track Guard			\$Call	\$Call	\$Call

Customized products available to meet your specific requirements.


**Instructions**




1. Unpack all components and locate the ground cover. The ground cover is the thick cloth type material. Unfold the ground cover and position it in the desired location.



2. Next, locate the spill berm. Unfold the spill berm and center it on top of the ground cover.

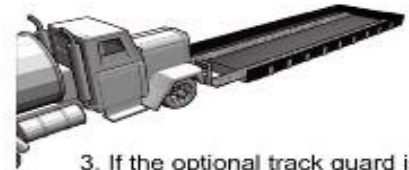

3. If the optional track guard is used, position it on top of the erected spill berm.

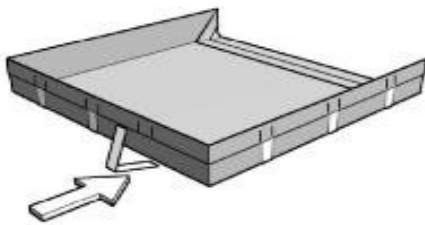

For the **Bracketed Berm**, locate the aluminum angle brackets. Insert the angle brackets into the perimeter pockets on three sides of the spill berm. Use the unsupported end for equipment entry. After equipment is in place, insert the angle brackets on the fourth side to complete the installation.



For the **InstaBerm**, pull all four sidewalls of the spill berm outward so that they are standing upright. Straighten the top angles of the wall supports inside the berm. The walls will move further outward as the berm is filled.

*“For all of your spill containment needs”*

Contact us today for assistance.

888-910-7543

HENEKMFG.COM

